

## **INSTALLATION INSTRUCTIONS**

# **FLYWHEEL MOUNT**

- BE SURE FLYWHEEL IS CLEAN AND FREE OF RUST AND DEBRIS.
- INSTALL HEX-FLX DRIVE PLATE TO FLYWHEEL USING PROPER INSTALLATION ORIENTATION. (SEE DIAGRAMS)
- HAYES MANUFACTURING RECOMMENDS THE USE OF GRADE 8/CLASS 10.9 FASTENERS, NO LOCK WASHERS, AND CHOICE OF RED OR BLUE THREAD LOCKER. TORQUE BOLTS TO ENGINE MFG. SPECS OR STANDARD TORQUE FOR GRADE/CLASS AND SIZE OF THREAD.

## PUMP PLATE/HOUSING MOUNT

- BE SURE ENGINE HOUSING IS CLEAN AND FREE OF RUST AND DEBRIS.
- INSTALL PUMP MOUNT PLATE USING PROPER INSTALLATION ORIENTATION. (SEE DIAGRAMS)
  - CHECK TO MAKE SURE DRIVE HUB FITS THROUGH PUMP PILOT BORE OF PUMP MOUNT PLATE.
  - IF HEX-FLX HUB FITS THROUGH PUMP PILOT OF MOUNTING PLATE, THEN INSTALL PUMP MOUNT PLATE TO ENGINE.
  - IF HUB DOES NOT FIT THROUGH PUMP PILOT BORE. FOLLOW THE NEXT STEPS, IN THIS ORDER.
  - SEE INSTRUCTIONS FOR PUMP MOUNTING.
  - SEE INSTRUCTIONS FOR DRIVE HUB MOUNTING.
- HAYES MANUFACTURING RECOMMENDS THE USE OF GRADE 5/CLASS 8.8 OR BETTER FASTENER. USE YOUR CHOICE OF WASHERS AND/OR THREAD LOCKER. TORQUE TO ENGINE MFG RECOMMENDATIONS OR USE STANDARD TORQUE FOR GRADE/CLASS AND SIZE OF BOLT.

## DRIVE HUB MOUNTING

- BE SURE PUMP SHAFT IS CLEAN AND FREE OF GREASE OR OIL
- INSTALL HUB ONTO PUMP SHAFT USING PROPER ORIENTATION. (SEE DIAGRAMS)
- HUB LOCATION IS IMPORTANT TO ENSURE PROPER ASSEMBLY. WHILE MAINTAINING HUB LOCATION, TORQUE SET SCREWS TO 45 FT.LBS.

WARNING!!! BE SURE THAT BOTH SET SCREWS ARE OVER THE PUMP SHAFT OR DAMAGE WILL OCCUR TO THE HUB.

# PUMP MOUNTING

- BE SURE PUMP FACE IS CLEAN AND FREE OF RUST AND DEBRIS.
- INSTALL PUMP TO PUMP PLATE. INSURE PUMP SITS FLAT AND FULLY AGAINST PUMP MOUNT PLATE FACE.
- HAYES MANUFACTURING RECOMMENDS THE USE OF GRADE 5/CLASS 8.8 OR BETTER FASTENER. USE YOUR CHOICE OF WASHERS AND/OR THREAD LOCKER. TORQUE TO HAYES MANUFACTURING RECOMMENDATIONS. (SEE DIAGRAMS)

WARNING!!! BOLTS MUST NOT PROTRUDE THRU PUMP MOUNT PLATE OR DAMAGE MAY OCCUR!

ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	D-010	SAE 10 DRIVE PLATE	1
2	123845-01	PUMP MOUNT PLATE	1
3	HD3-90	HEX-FLX HUB	1

DESCRIPTION
1/2° 10,3,13T8/16,D24
1005 METGHT NOT THE

TRIC DIMENSIONS ARE IN INCHES


ESS FRACTIONAL ±1/32

ELISM TWO DECIMAL ±.01

THREF DECIMAL ±.01

UNIEKBÜKE ÇHOLE DEPT
UNTERSINK = SYMMETR
VCENTRICITY FLATNE:
JE POSITION ROUNDNES
ERPENDICULARITY PARALLEI
RCULAR RUN OUT Ø DIAMETER
TOTAL RUN OUT "R" RADIUS

2

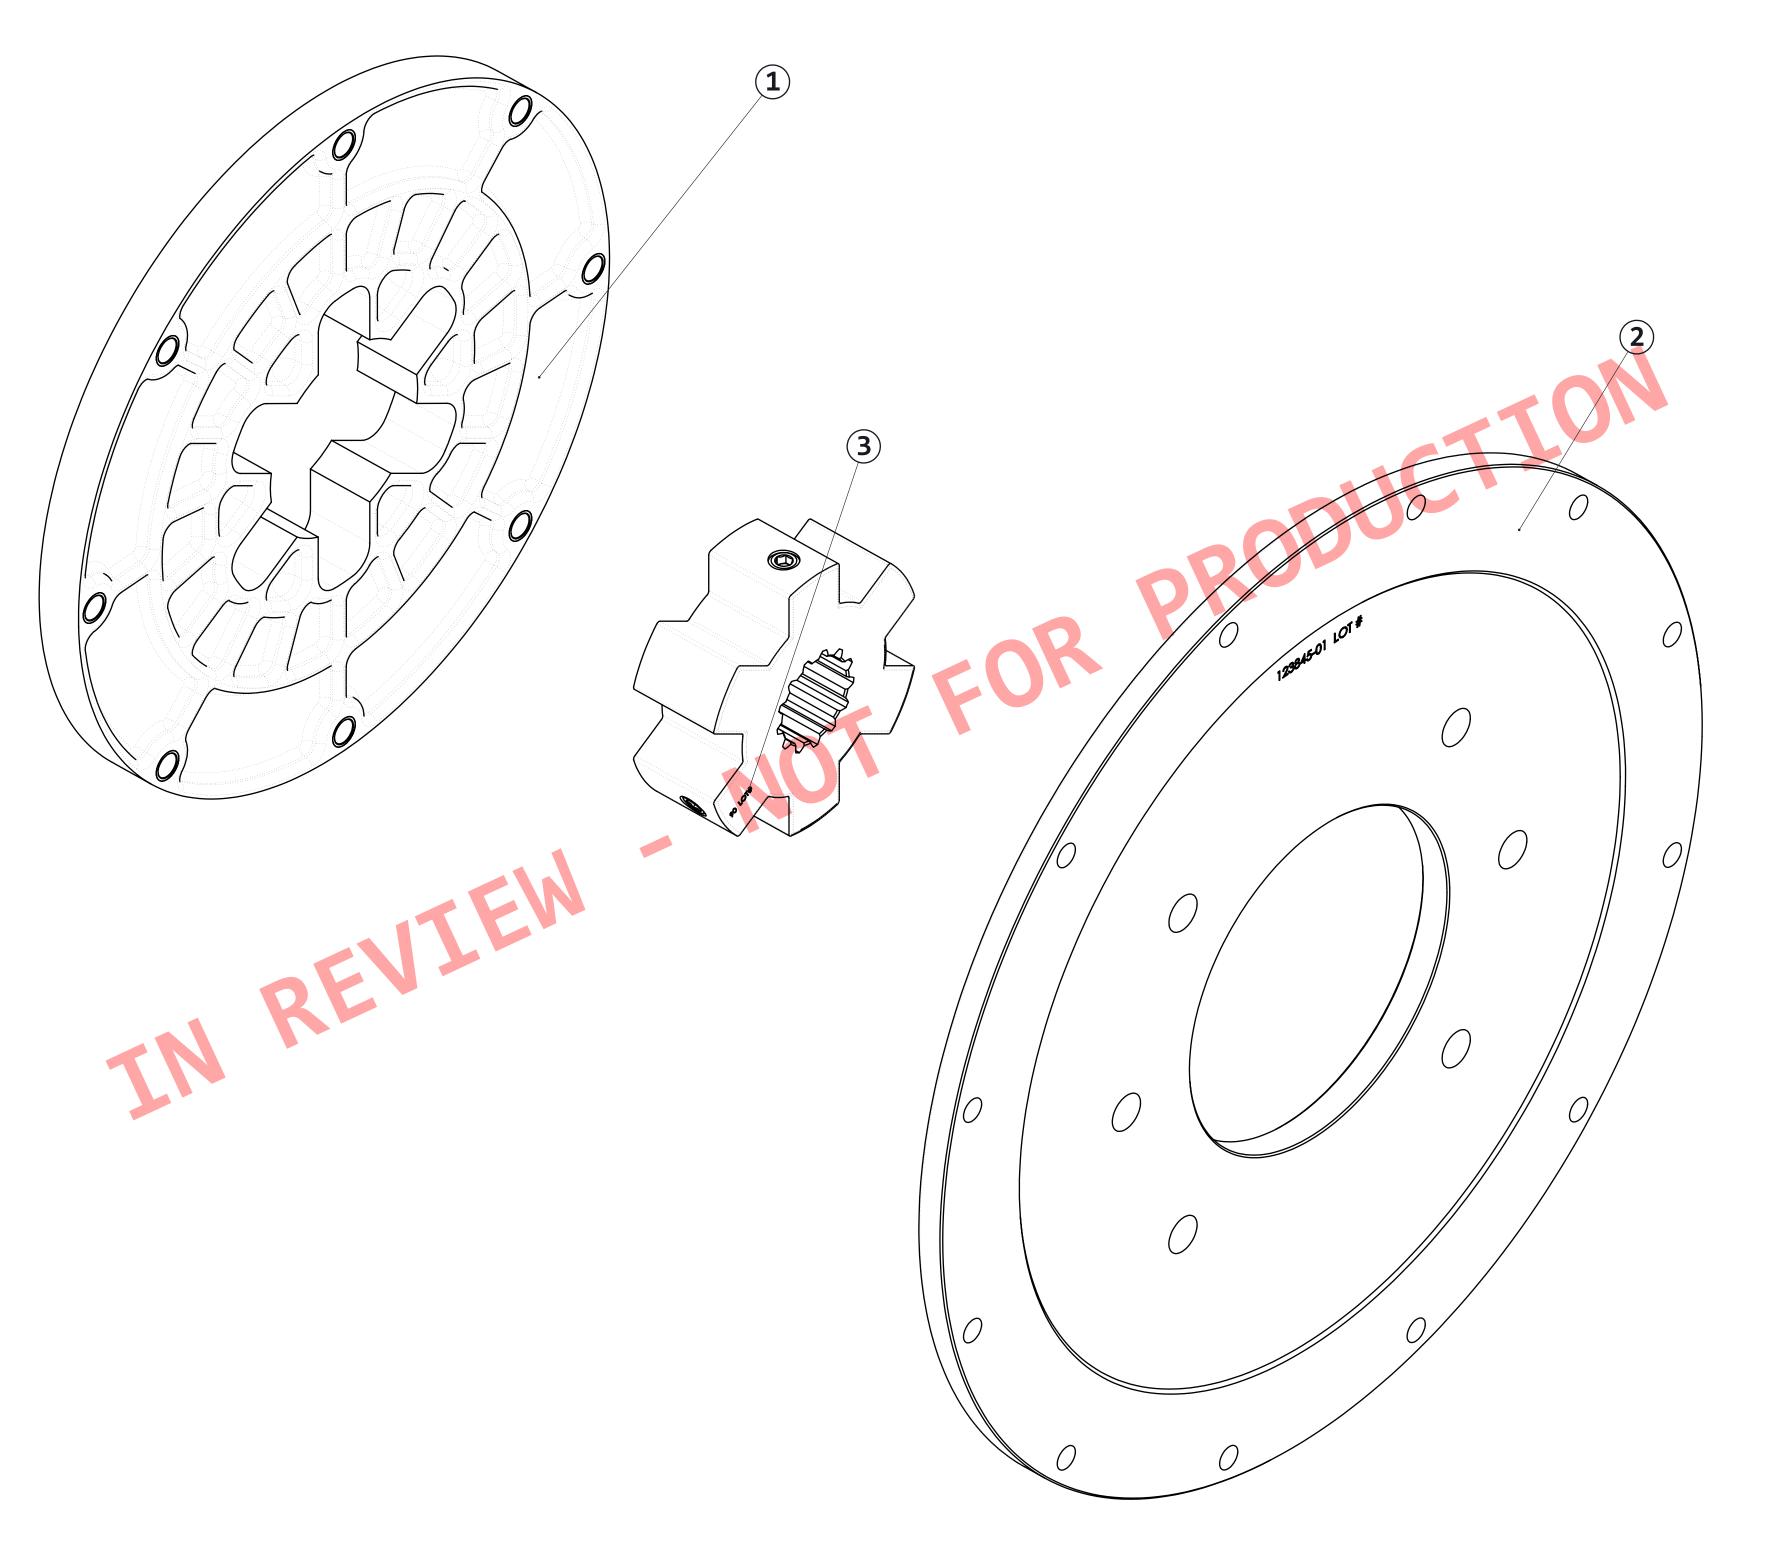

STANDARD SYMBOLS

SPECIFIED:
SAE 10

CONCENTRICITY
FLATNESS
TOLERANCES:
TOLERANCES:
FRACTIONAL ±1/32
ANGULAR: MACH ±1/2
PERPENDICULARITY
PARALLELISM
TWO DECIMAL ±.005
THREE DECIMAL ±.00